

# Quick Setup

Before using the projector, make sure you read the safety instructions in the online *User's Guide*.


**Note for Spanish speakers/Nota para hispanohablantes:** Para obtener instrucciones de configuración en español, consulte la *Guía de instalación* en [www.epson.com/support/homecinema500](http://www.epson.com/support/homecinema500) (requiere una conexión a Internet).

## Connect the projector


Choose from the following connections. See the sections below or the online *User's Guide* for details.

### Video device

Connect up to 4 video devices and press the **Source Search** button on the projector or remote control to cycle through them.

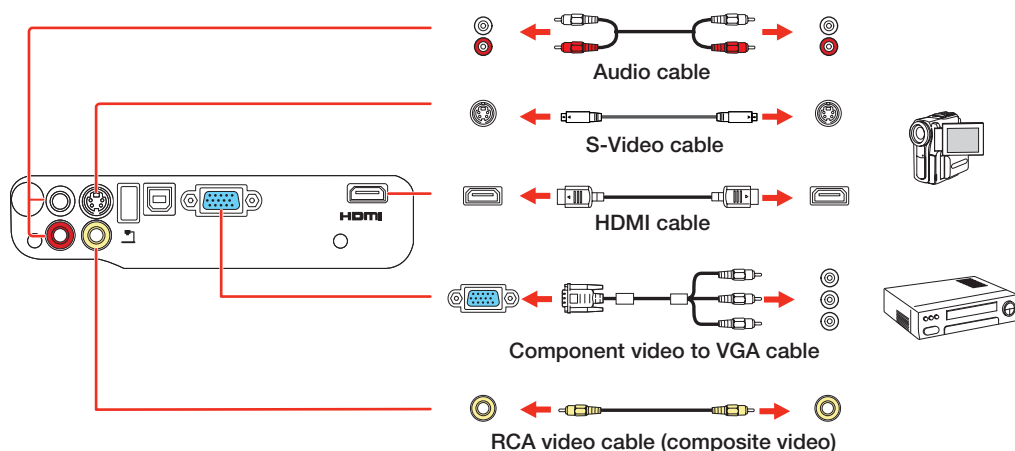

### Computer

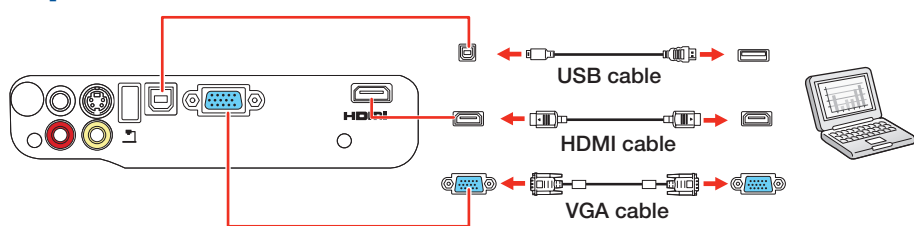

### USB port

 
Connect the square end of a USB cable to the projector's USB **TypeB** (square) port. Connect the flat end of the cable to any USB port on your computer.

**Windows® XP or later:** After turning on the projector, follow the on-screen instructions to install the EPSON® USB Display software (**EMP\_UDSE.EXE**; only on first connection). If the software screen does not display automatically, open **My Computer** or **Computer**, then double-click **EPSON\_PJ\_UD**.

**Mac OS X 10.5.1 or higher:** After turning on the projector, the setup folder for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the EPSON USB Display software (only on first connection).

**Note:** If you have problems installing the USB Display software, make sure the **USB Type B** setting in the projector's **Extended** menu is set to **USB Display**. See the online *User's Guide* for instructions.

### Monitor port

Connect one end of a VGA cable to the projector's **Computer** port, and the other end to your computer's  monitor port. If you are using a laptop, switch it to external display (see "Troubleshooting"). You can also connect an audio cable.


### HDMI port

Connect one end of an HDMI cable to the projector's **HDMI** port and the other end to an HDMI port on your computer.

**Note:** To connect a Mac that includes only a Mini DisplayPort or Mini-DVI port for video output, you need to obtain an adapter that allows you to connect to the projector's **Computer** or **HDMI** port. Contact Apple for compatible adapter options. Older Mac computers (2009 and earlier) may not support audio through the HDMI port.

### Camera, USB device, or EPSON DC-06 Document Camera


Connect a digital camera, USB flash drive, USB storage device, or EPSON DC-06 Document Camera to the projector's USB **TypeA** (flat) port.

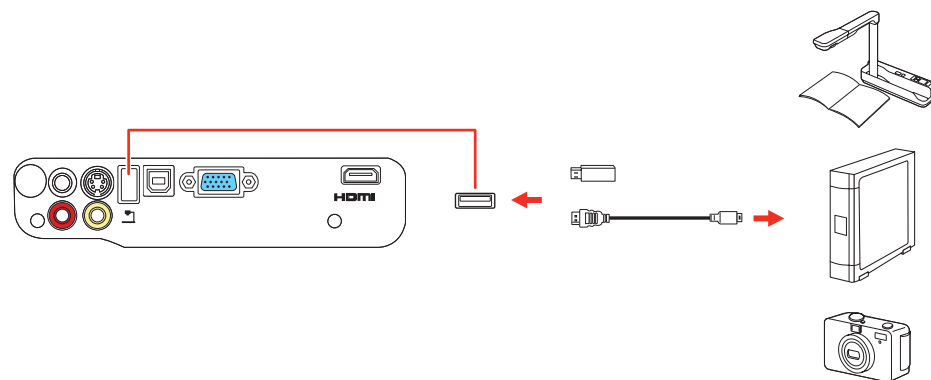


If you connect a digital camera, USB flash drive, or USB storage device, you can use the projector's Slideshow feature to project images. See the online *User's Guide* for details.


## Turn on your equipment


- 1 Turn on your computer or video source.
- 2 Plug in the projector. The power light on the projector turns orange.

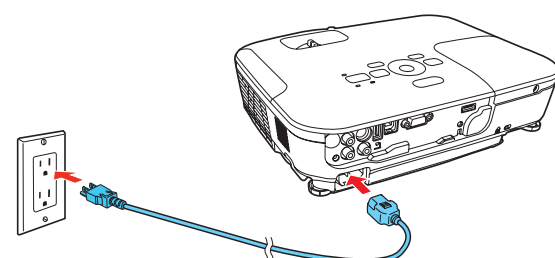


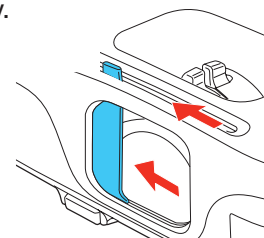


- 3 Open the lens cover all the way.



- 4 Press the  power button on the projector or remote control. The projector beeps, the power light flashes green, and then stays on.

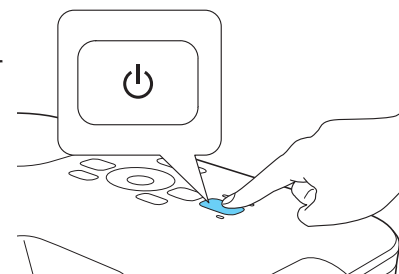**Note:** To shut down the projector, press the  power button twice, then unplug it. You don't have to wait for the projector to cool down.




- 5 The default language of the menu system is **English**. To select another language, press the **Menu** button on the remote control. Select **Extended** and press . Select **Language** and press . Select your language and press . Press the **Menu** button to exit the menu system.

## Adjust the image


- 1 If you don't see an image, press the **Source Search** button on the projector or remote control to select the image source.

**Note:** If you still see a blank screen or have other display problems, see the *troubleshooting tips on the right*.


- 2 To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.


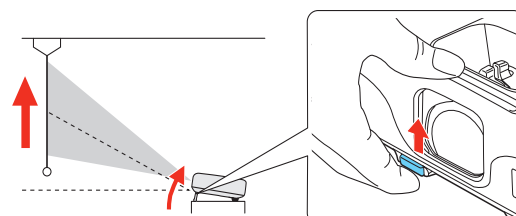




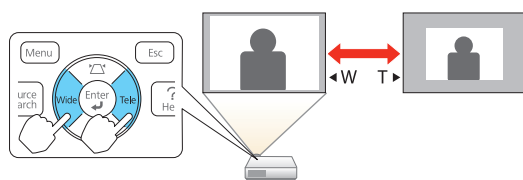

  - 3 Press the **Tele** (reduce) or **Wide** (enlarge) buttons on the projector to reduce or enlarge the image.

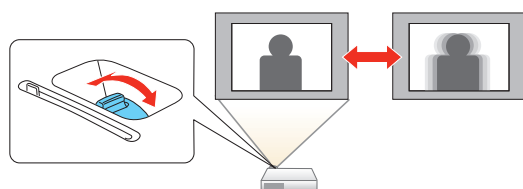



- 4 Turn the focus ring to sharpen the image.



- 5 If your image looks like  or , you've placed the projector off to one side of the screen at an angle. Place it in front of the center of the screen, facing the screen squarely.
- 6 Your projector automatically adjusts images that look like  or , but if necessary you can press the  or  button on the projector to correct it.

## Using the remote control


Make sure the batteries are installed as shown (two AA batteries).

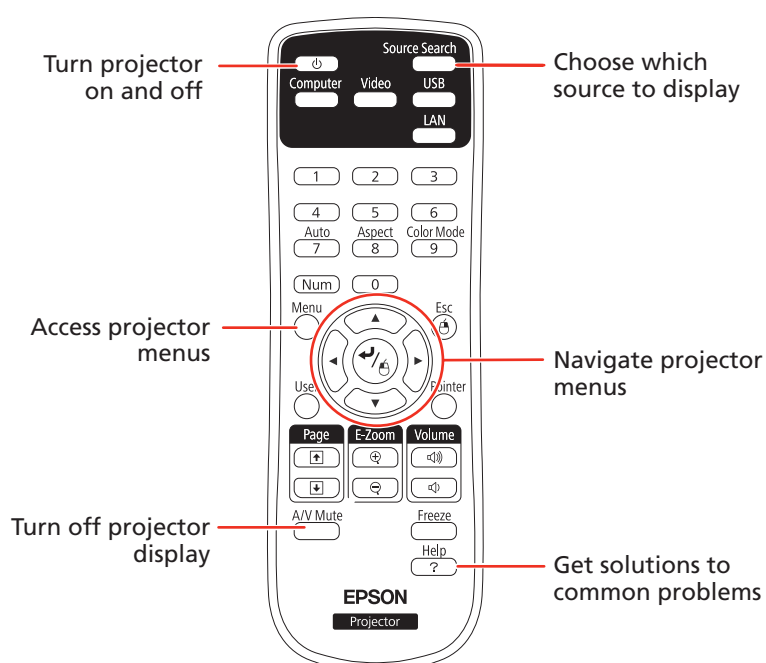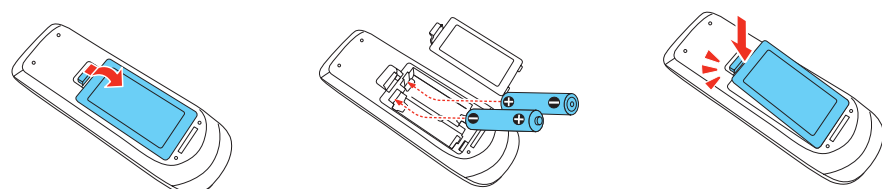

For more information on using the remote control, see the online *User's Guide*.

## Troubleshooting

If you see a blank screen or the **No signal** message after turning on your computer or video device, check the following:

- Make sure the power light on the projector is green and not flashing, and the lens cover is open.
- Press the **Source Search** button on the projector or the remote control to switch to the correct image source, if necessary.
- If you're using a Windows laptop, press the function key on your keyboard that lets you display on an external monitor. It may be labeled **CRT/LCD** or have an icon such as . You may have to hold down the **Fn** key while pressing it (such as **Fn + F7**). Wait a moment for the display to appear.
- If you're using a Mac laptop, open **System Preferences** and select **Displays**. Select the **VGA Display** or **Color LCD** option if necessary, then click the **Arrange** or **Arrangement** tab, and select the **Mirror Displays** checkbox.

## Where to get help

### Manual

For more information about using the projector, click the icon on your desktop to access the online *User's Guide* (requires an Internet connection). If you don't have a User's Guide icon, you can install it from the projector CD or go to the Epson website, as described below.

### Telephone support services

To use the EPSON® PrivateLine® Support service, call (800) 637-7661. This service is available for the duration of your warranty period. You may also speak with a projector support specialist by dialing (562) 276-4394.

Support hours are 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Pacific Time, Saturday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

### Internet support

Visit [www.epson.com/support](http://www.epson.com/support) (U.S.) or [www.epson.ca/support](http://www.epson.ca/support) (Canada) for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson.

### Registration

Register today to get product updates, special promotions and customer-only offers. You can use the CD included with your projector, or register online at [www.epson.com/webreg](http://www.epson.com/webreg).

**EPSON**  
EXCEED YOUR VISION



EPSON is a registered trademark and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation. PrivateLine is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2012 Epson America, Inc. 9/12  
Printed in XXXXXX

CPD37896R1